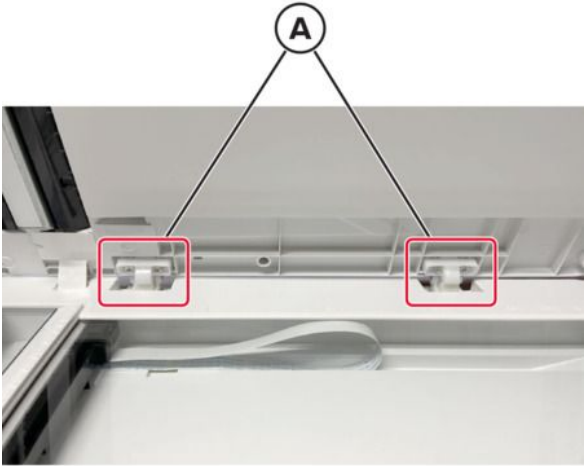
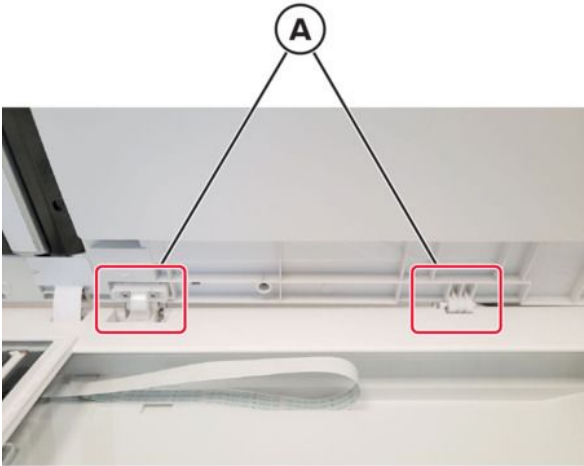


# ADF hinge removal


**Note:** This removal is only applicable to the new ADF scanner and the new flatbed scanner.

Check the category of the ADF hinge:


| Part                                                                                | Category                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | Old                                                                                                                                                                                                                                              |
|  | New <p><b>Note:</b> If a printer has the new ADF hinge installed, then either has or both of the following have been installed:</p> <ul style="list-style-type: none"><li>• ADF scanner assembly (new)</li><li>• Flatbed scanner (new)</li></ul> |

## Removal procedure


1. Remove the scanner stand. For more information, see [Scanner stand removal on page 327](#).
2. Hold the ADF and scanner assembly upright, and then remove the screw (A) and the bracket (B).

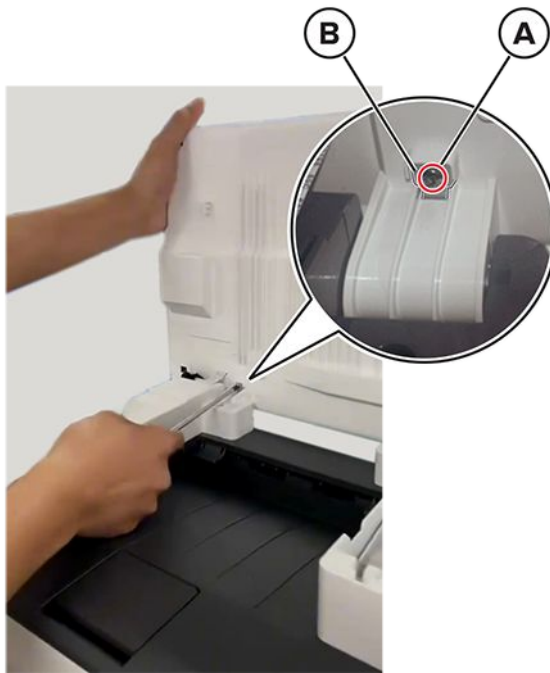


**Note:** Do not lose the bracket (B).

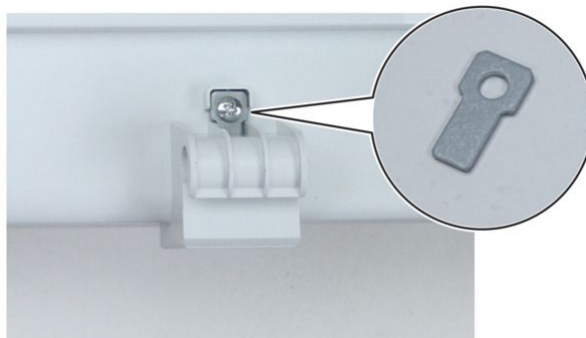


3. Lower the ADF and scanner assembly, raise the ADF, and then remove the four screws (C).

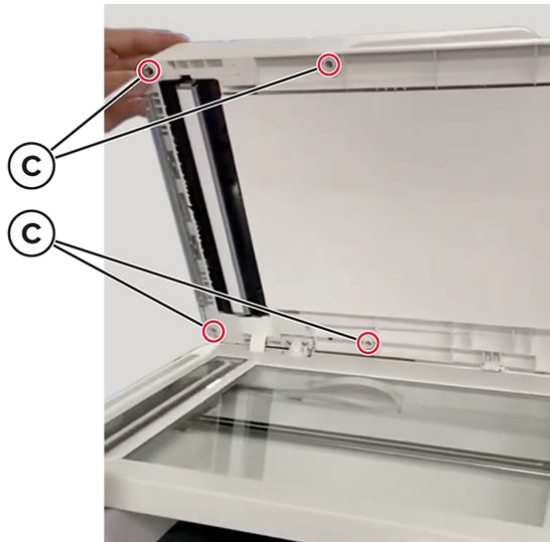

4. Lower the ADF, open the ADF cover, and then remove the ADF tray (D).

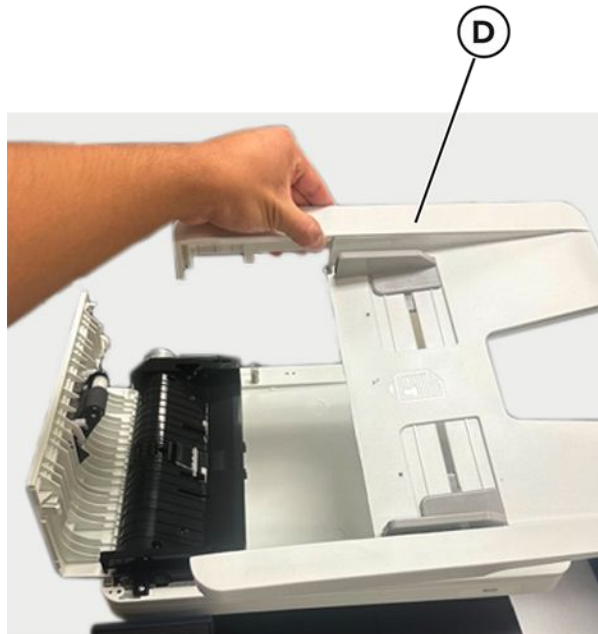


5. Close the ADF cover, raise the ADF, and then remove the two bolts (E) and their corresponding nuts (F) on the outer side.

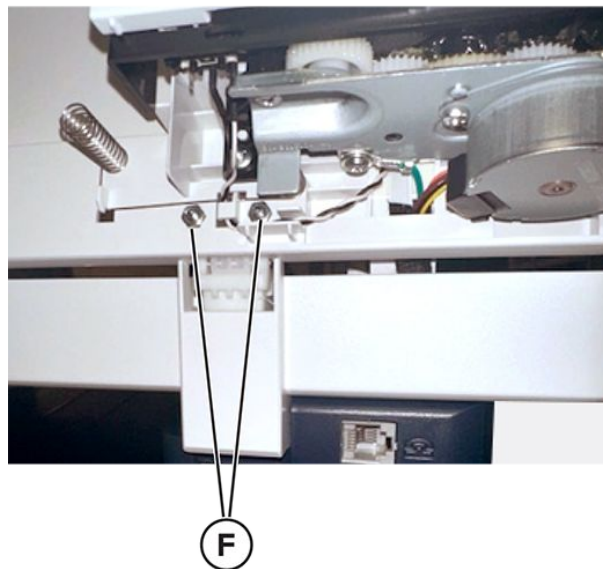

**Note:** When removing the two bolts (E), hold their corresponding nuts (F) on the outer side.

6. Hold the ADF upright, and then slowly remove the ADF hinge (G).

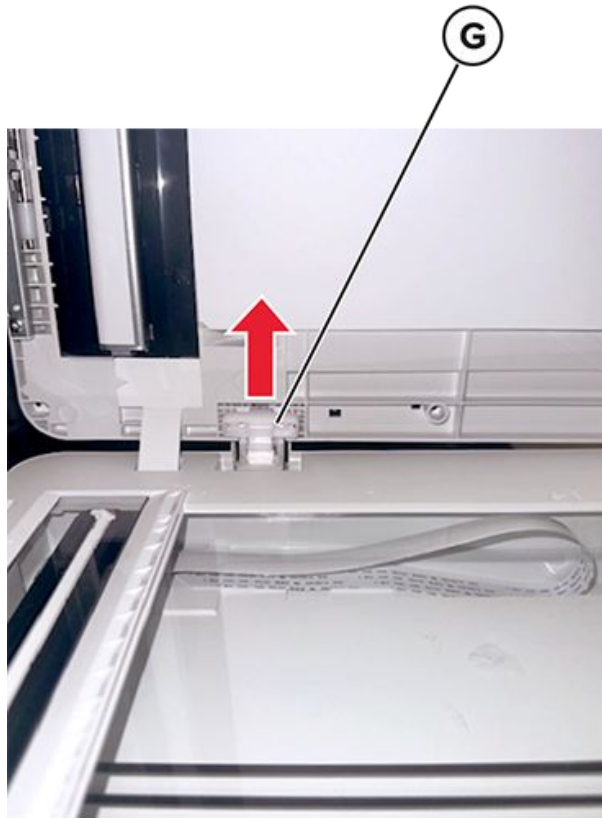

**Installation Note:**

Make sure that the cover (H) is properly inserted after installing the ADF hinge.



H